

Pleuger Electrical Submersible Pumps and Water-filled Motors

MAINTENANCE CHECKLIST



! DANGER

Read User Instructions (1042.277/7) **before** installing or maintaining the submersible pump unit with submersible water-filled motor.

Submersible Pump End

Submersible Pump Standard

Pump checklist on nameplate or datacard	
Flow	m ³ /h - gpm
Head	m - ft
Riser pipe connection	threaded/flanged
Shut-off head	m - ft
Pump unit dry running protection	Install dry running sensor 10 m above pump



Submersible Motor Water-filled Design

Submersible motor checklist on nameplate or datacard	
Network voltage/frequency	Check network voltage and frequency with nameplate motor
Motor lubricant water/glycol fluid*	If needed refill with drinking water only (no other liquid permissible)
Insulation resistance	Minimum insulation value 150 Mohm at 20°C (new windings)
Safe cable installation	Protect cable at riser pipes with clamps
Connection to power source	Check cable connection to power source (refer detailed manual 1042.277/7)
Adjust motor current at relay	Set at maximum rated current to guarantee motor protection
Motor/pump rotation	Verify total delivered head of pump

* Motors are pre-filled (65% volume drinking water/35% volume glycol)

Design Center Pleuger Water-filled Submersible Motors and Submersible Pumps
Flowserve Hamburg GmbH
Friedrich-Ebert-Damm 105,
22047 Hamburg
Postfach P.O. Box 70 13 20 D
22013 Hamburg
Telephone: + 49 40 69 689 - 0
Telefax: + 49 40 69 689 - 488

Flowserve Flow Solutions Group (MCOE)
Taneytown Pike
MD 21787 Taneytown
Telephone: + 01 410 756 2602
Telefax: + 01 140 756 3594

Flowserve France
Flowserve Pleuger
21 Rue de la Mouchetiere
Telephone: + 33(0)2 38 70 84 00
Telefax: + 33(0)2 38 43 0092

Flowserve Flow Solutions Group - UK
P.O. Box 17
Newark, Notts NG243EN
Telephone: + 44 (0) 1636 494 600
Telefax: + 44 (0) 1636 494 889

Flowserve Spain, S.L.
AV Madrid 67
Arganda del Rey 28500
Madrid
Telephone: + 34 918 76 07 50
Telefax: + 34 918 70 34 45

Flowserve Flow Solutions Group
Unit 5, 3 Faigh Street
Mulgrave Vic 3170
Australia
Telephone: + 61 3 9562 0744
Telefax: + 61 3 9574 3101

For sales and product information, go to www.flowserve.com

Submersible – Pump Motor Cable Connection to Network

Clockwise Rotation

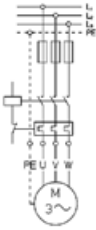 


Figure 1

Direct on-line starting – one power supply cable		
	Old	New
U =	black	
V =	light blue	brown
W =	brown	grey
PE =	green/yellow	

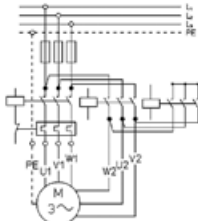


Figure 2

Star-delta starting		
	Old	New
U ₁ /U ₂ =	black	
V ₁ /V ₂ =	light blue	brown
W ₁ /W ₂ =	brown	grey
PE =	green/yellow	

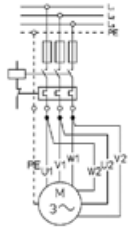


Figure 3

Direct-on line starting – delta connection in control panel		
	Old	New
U ₁ /U ₂ =	black	
V ₁ /V ₂ =	light blue	brown
W ₁ /W ₂ =	brown	grey
PE =	green/yellow	

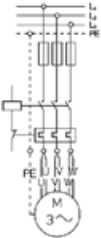 


Figure 4

Direct on-line starting – two power supply cable		
	Old	New
U =	black	
V =	light blue	brown
W =	brown	grey
PE =	green/yellow	

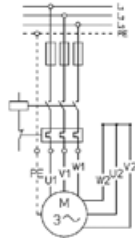


Figure 5

Direct on-line starting – star connection in control panel		
	Old	New
U ₁ /U ₂ =	black	
V ₁ /V ₂ =	light blue	brown
W ₁ /W ₂ =	brown	grey
PE =	green/yellow	

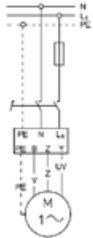 



Figure 6

Single-phase motor		
	Old	New
V =	light blue	
UV =	brown	
Z =	black	
PE =	green/yellow	

Re-fill Submersible Motors**

Note: After re-filling procedure is completed, do not install cap 0236.

The cap is for motor transport only!

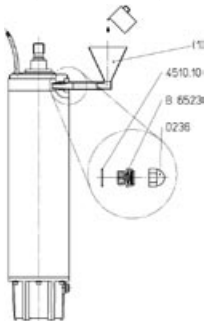

Submersible Motor
(water/glycol – pre-filled)
Standard Motor

